AUTOMATIC GRILL SHUT-OFF RH PETERSON CO. 3-HOUR TIMER INSTRUCTIONS

Model # 3090

Rated up to 100,000 BTUs / Max temperature 125°F



Fit the Automatic Grill Shut-Off Timer in the gas supply line before the grill. The timer accommodates 1/2" NPT piping (both ends).

Important:

Ensure you connect the gas supply to the side marked "IN" on the timer (see photo). It MUST NOT be fitted within 18" of the grill, or it will overheat, causing damage to the timer and may result in a leak.

Use pipe joint compound on male fittings attached to the timer.

To use, set the dial (turn clockwise) to the desired time to shut off. The dial is marked in 3 one hour increments (any position in between is an estimate of that hour). The timer dial will auto rotate (counter-clockwise) and will shut off the gas supply when the dial reaches OFF (i.e. the time is completed).

Important:

When using the timer for periods of less than one hour, you must first set the dial to 1 hour (to activate), then return (counter-clockwise) to the desired amount of time. This will ensure proper timer operation. See Fig. 1-1.

Timer setting mark (shown here in OFF) Gas flow direction (to grill) FIREMAGIC Gas supply Grill side side Turn past 1 hour to activate Fig. 1-1 Time settings: 1-3 hours

ROBERT H. PETERSON CO. • 14724 East Proctor Avenue • City of Industry, CA 91746

REV 4 - 1411170915 L-C2-146



AUTOMATIC GRILL SHUT-OFF RH PETERSON CO. 3-HOUR TIMER INSTRUCTIONS

Model # 3090

Rated up to 100,000 BTUs / Max temperature 125°F



Fit the Automatic Grill Shut-Off Timer in the gas supply line before the grill. The timer accommodates 1/2" NPT piping (both ends).

Important:

Ensure you connect the gas supply to the side marked "IN" on the timer (see photo). It MUST NOT be fitted within 18" of the grill, or it will overheat, causing damage to the timer and may result in a leak.

Use pipe joint compound on male fittings attached to the timer.

To use, set the dial (turn clockwise) to the desired time to shut off. The dial is marked in 3 one hour increments (any position in between is an estimate of that hour). The timer dial will auto rotate (counter-clockwise) and will shut off the gas supply when the dial reaches OFF (i.e. the time is completed).

Important:

When using the timer for periods of less than one hour, you must first set the dial to 1 hour (to activate), then return (counter-clockwise) to the desired amount of time. This will ensure proper timer operation. See Fig. 1-1.

Timer setting mark (shown here in OFF) Gas flow direction (to grill) FIREMAGIC Gas supply Grill side side Turn past 1 hour to activate Time settings: 1-3 hours Fig. 1-1

ROBERT H. PETERSON CO. • 14724 East Proctor Avenue • City of Industry, CA 91746

REV 4 - 1411170915 L-C2-146